

---

▶ **Primare C30 Remote Control User Guide**

---

## COPYRIGHT AND ACKNOWLEDGMENTS

Copyright © 2000 Primare Systems AB. All rights reserved.

Primare Systems AB  
Idavägen 17D  
SE-352 46 Växjö  
Sweden

The information in this guide is believed to be correct as of the date of publication. However, our policy is one of continuous development and so the information is subject to change without notice, and does not represent a commitment on the part of Primare Systems AB.

Primare is a trademark of Primare Systems AB. All rights reserved. All other product names are trademarks or registered trademarks of their respective owners.

This guide was produced by Human-Computer Interface Ltd,  
<http://www.interface.co.uk>

# ► Introduction

**Welcome to the Primare C30 Remote Control. This booklet explains how to use the C30 to operate all the units in your Primare system.**

## WELCOME TO THE C30 REMOTE CONTROL

The elegant C30 Remote Control allows you to operate all the units in your Primare system with a set of simple and logical push button controls.

### **Ergonomic design**

The C30 is designed to be extremely comfortable to hold, and its weight makes it easy to balance it in the palm of a hand while operating the controls. Its durable construction ensures that it will continue to operate perfectly for many years to come.

### **Future proof**

The C30 has been designed so that it can be upgraded to control future products in the Primare range, not yet introduced, by the simple operation of adding an upgrade chip.

## MODE BUTTON

To operate a processor or amplifier the **MODE** light should be off. If necessary press the **MODE** button to turn it off.

To operate a DVD or CD player, or an FM tuner, press the **MODE** button. The green **MODE** light will be illuminated to indicate that the source control keys are active. Press the **MODE** button again to switch the remote control back to

operating your processor or amplifier.

Note that after a short delay the **MODE** light dims to conserve the batteries. It will light up again as soon as you operate any of the buttons.

## CHANGING THE BATTERIES

If the **MODE** light does not illuminate clearly when you press the **MODE** button you should replace the C30's batteries. To do this proceed as follows:

- Remove the four screws on the back panel of the C30, using a small cross point precision screwdriver.
- Gently lift up the back panel and put it to one side.
- Remove the two batteries from the battery compartment and replace with two alkaline size AAA 1.5 Volt batteries, taking care to fit them with the correct polarity as marked on the inside of the battery compartment.

Do not touch the circuit board as you may damage the sensitive electrical components.


Please be considerate to the environment when disposing of the old batteries.

- Replace the back panel and secure it in place using the four screws.

# Operating a Primare processor or amplifier

**This section explains how to use the C30 Remote Control to operate the control unit in your system, whether it is a Primare P30 Processor, a Primare A30.1 or A30.5 Integrated Amplifier, or a Primare A10 or A20 Integrated Amplifier.**

The following diagram shows the C30 Remote Control buttons that you use to control the functions of your Primare processor or integrated amplifier:

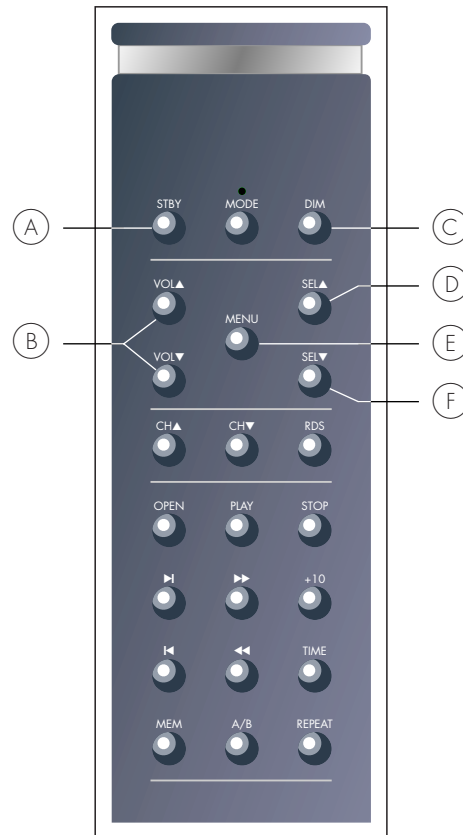


- (A) The **STBY** button mutes the sound. Holding it down switches the processor or amplifier to standby.
- (B) The **VOL ▲** and **VOL ▼** buttons change the volume.
- (C) The **DIM** button dims the front panel display.
- (D) The **SEL ▲** button selects the next source, or the next option on the P30 Processor's menus.
- (E) The **MENU** button selects which setting you change with the **VOL ▲** and **VOL ▼** buttons. On the P30 Processor holding it down displays the **MAIN MENU**.
- (F) The **SEL ▼** button selects the previous source, or the previous option on the P30 Processor's menus.

# Operating a Primare CD or DVD player

This section explains how to use the C30 Remote Control to operate the CD or DVD player in your system, whether it is a Primare V20 DVD player, or a Primare D20 or D30.2 Integrated CD player.

The following diagram shows the C30 Remote Control buttons that you use to control a DVD or CD player:

 - (A) The **STBY** button brings the DVD/CD player out of standby, or puts it into standby.
- (B) The **VOL ▲** and **VOL ▼** buttons move the cursor left or right on DVD menus.
- (C) The **OPEN** button opens or closes the tray.
- (D) The **◀** and **▶** buttons step between tracks on a CD or chapters on a DVD.
- (E) The **MEM** button displays the DVD menu.
- (F) The **DIM** button dims the front panel display. Select another function to restore the display.
- (G) The **SEL ▲** button highlights the previous item on a DVD menu.

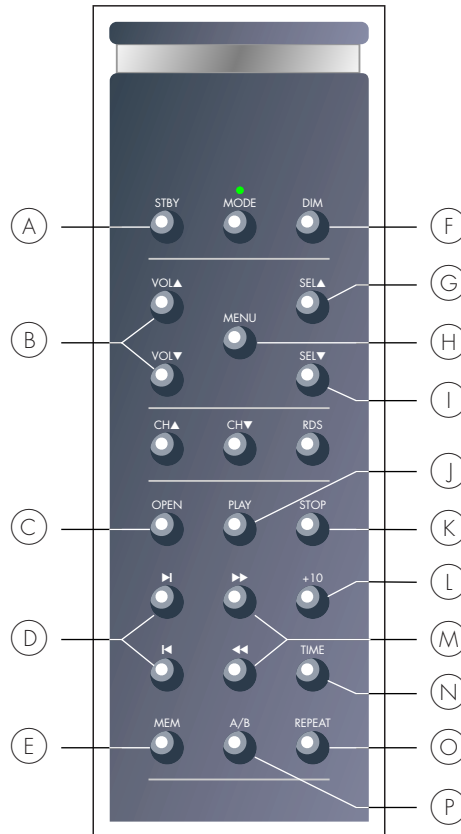


- (H) The **MENU** button selects the currency highlighted item on a DVD menu.
- (I) The **SEL ▲** button highlights the next item on a DVD menu.
- (J) The **PLAY** button plays or pauses a disc.
- (K) The **STOP** button stops a disc.
- (L) The **± 10** button increases the track number by ten on a CD player.
- (M) The **◀▶** buttons select fast forward or fast reverse play.
- (N) The **TIME** button displays elapsed time on a CD player.
- (O) The **REPEAT** button selects a repeat mode.
- (P) The **A/B** button allows you to repeat a section of a disc between two points.

# Operating a Primare FM stereo tuner

This section explains how to use the C30 Remote Control to operate a Primare T20 FM Stereo Tuner.

The following diagram shows the C30 Remote Control buttons that you use to control an FM tuner:

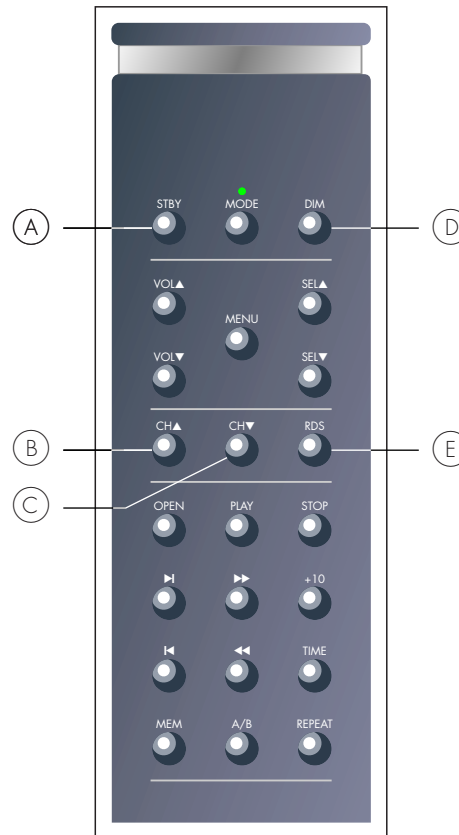

- (A) The **STBY** button switches the FM tuner to standby, or brings it out of standby.
- (B) The **CH ▲** button selects the previous station.
- (C) The **CH ▼** button selects the next station.
- (D) The **DIM** button dims the front panel display. Select any other function to restore the display.
- (E) The **RDS** button displays the station RDS information.