

---

▶ **Primare C31 Remote Control User Guide**

---

## COPYRIGHT AND ACKNOWLEDGMENTS

Copyright © 2001 Primare Systems AB. All rights reserved.

Primare Systems AB  
Idavägen 17D  
SE-352 46 Växjö  
Sweden

The information in this guide is believed to be correct as of the date of publication. However, our policy is one of continuous development and so the information is subject to change without notice, and does not represent a commitment on the part of Primare Systems AB.

Primare is a trademark of Primare Systems AB. All rights reserved. All other product names are trademarks or registered trademarks of their respective owners.

This guide was produced by Human-Computer Interface Ltd,  
<http://www.interface.co.uk>

# ▶ Introduction

**Welcome to the Primare C31 Remote Control. This booklet explains how to use the C31 to operate all the units in your Primare system.**

## WELCOME TO THE C31 REMOTE CONTROL

The elegant C31 Remote Control allows you to operate all the units in your Primare system with a set of simple and logical push button controls.

### **Ergonomic design**

The C31 is designed to be extremely comfortable to hold, and its weight makes it easy to balance it in the palm of a hand while operating the controls. Its durable construction ensures that it will continue to operate perfectly for many years to come.

### **Future proof**

The C31 has been designed so that it can be upgraded to control future products in the Primare range, not yet introduced, by the simple operation of adding an upgrade chip.

## CODE BUTTON

The **CODE** button allows you to select which Primare unit is controlled by the C31 Remote Control.

Pressing the **CODE** button switches between the following three modes, as shown by the **CODE** light:

<b>CODE light</b>	<b>Controls</b>
Off	CD players, P30/SP30 Processor, tuners, and integrated amplifiers.
On	DVD players, P30/SP30 Processor, tuners, and integrated amplifiers.
Flashing	CD players, PRE30 Preamplifier, and tuners.

**Note:** After a short delay the **CODE** light dims to conserve the batteries. It will light up again as soon as you operate any of the buttons.

## DISABLING PRE30 MODE

If you do not have a PRE30 Preamplifier you can disable PRE30 mode as follows:

- Remove the C31 batteries, as described below.
- Replace the batteries while holding down the **STBY** button.

To restore PRE30 mode:

- Remove and then replace the batteries while holding down the **DIM** button.

## CHANGING THE BATTERIES

If the **CODE** light does not illuminate clearly when you press the **CODE** button you should replace the C31's batteries.

**Note:** The batteries should be replaced with two alkaline type AAA 1.5 volt batteries.

To do this proceed as follows:

- Remove the four screws on the back panel of the C31, using a small cross point precision screwdriver.
- Gently lift up the back panel and put it to one side.
- Remove the two batteries from the battery compartment and replace with two alkaline size AAA 1.5 Volt batteries, taking care to fit them with the correct polarity as marked on the inside of the battery compartment.

Do not touch the circuit board as you may damage the sensitive electrical components.

Please be considerate to the environment when disposing of the old batteries.


- Replace the back panel and secure it in place using the four screws.

# ▶ Operating a Primare processor or amplifier

**This section explains how to use the C31 Remote Control to operate the control unit in your system, whether it is a Primare P30/SP30 Processor, a Primare Integrated Amplifier, or a Primare PRE30 Preamplifier.**

The following diagram shows the C31 Remote Control buttons that you use to control the functions of your Primare processor or integrated amplifier:

 - (A) The **STBY** button mutes the sound. Holding it down switches the processor or amplifier to standby.
- (B) The ▲ and ▼ buttons change the volume, or step between the options on the P30/SP30 Processor's menus.
- (C) The **MENU** button displays the on-screen display on the P30/SP30 Processor.
- (D) The **BAL/SETUP** button selects which setting you change with the ▲ and ▼ buttons.

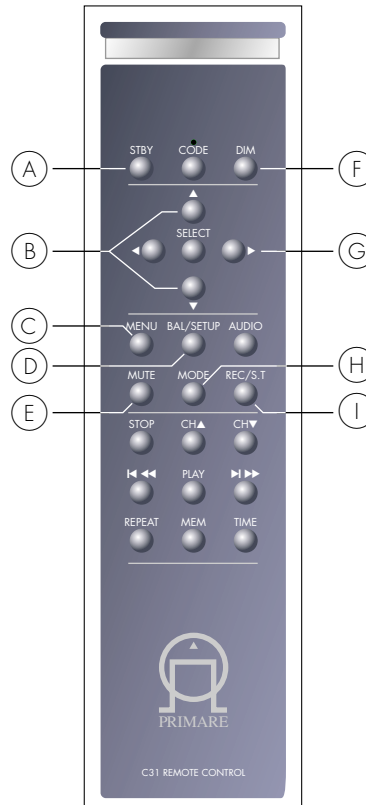


- (E) The **MUTE** button mutes the sound.
- (F) The **DIM** button dims the front panel display.
- (G) The ◀ and ▶ buttons step between sources, or select the current option on the P30/SP30 Processor's menus.
- (H) The **MODE** button selects the surround bypass mode on the PRE30 Preamplifier, or the audio mode on the SP30 Processor.
- (I) The **REC/S.T** button selects tape out on the PRE30 Preamplifier.

# ▶ Operating a Primare CD or DVD player

**This section explains how to use the C31 Remote Control to operate the CD or DVD player in your system, whether it is a Primare V20 DVD player, or a Primare D20 or D30.2 Integrated CD player.**

The following diagram shows the C31 Remote Control buttons that you use to control a DVD or CD player:

 - (A) The **STBY** button brings the DVD player out of standby, or puts it into standby. Holding it down puts the CD player into standby.
- (B) The ▲, ▼, ◀, and ▶ buttons move the cursor on DVD menus.
- (C) The **SELECT** button selects the currently highlighted item on a DVD menu.
- (D) The **MENU** button displays the DVD menu.
- (E) The **STOP** button stops a disc. Hold it down for two seconds to open the disc tray.
- (F) The **PLAY** button plays or pauses a disc.
- (G) The **REPEAT** button selects a repeat mode.

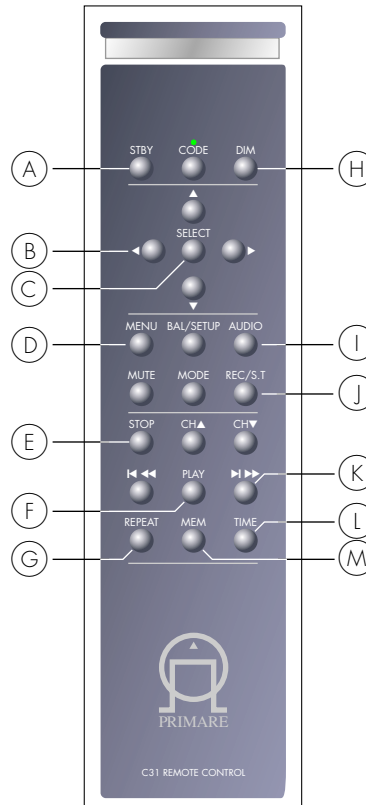


- (H) The **DIM** button dims the front panel display. Select another function to restore the display.
- (I) The **AUDIO** button selects the audio soundtrack on a DVD player.
- (J) The **REC/S.T** button switches the subtitles on or off on a DVD player.
- (K) The ◀◀ and ▶▶ buttons step to the previous or next track. Hold the button down for fast reverse or fast forward.
- (L) The **TIME** button displays the elapsed time on a CD player, or displays the status bar on a DVD player.
- (M) The **MEM** button programs a selection of tracks.

# ► Operating a Primare FM stereo tuner

**This section explains how to use the C31 Remote Control to operate a Primare T20 FM Stereo Tuner.**

The following diagram shows the C31 Remote Control buttons that you use to control an FM tuner:

 (A) Holding the **STBY** button down puts the FM tuner into standby.

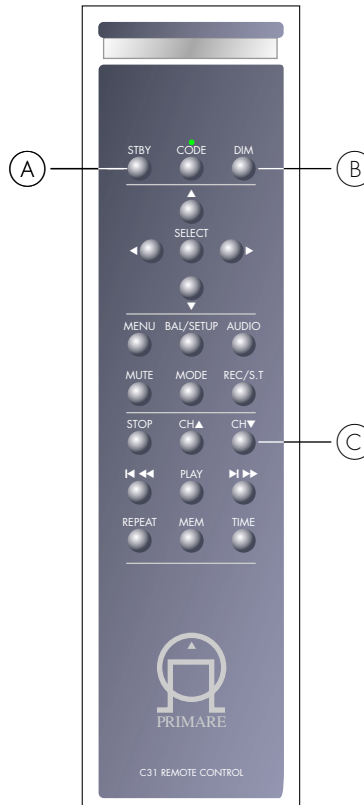

(B) The **DIM** button dims the front panel display. Select any other function to restore the display.

(C) The **CH ▲** and **CH ▼** buttons step between stations.