

---

▶ **Primare A30.2 Amplifier User Guide**

---

## COPYRIGHT AND ACKNOWLEDGMENTS

Copyright © 2000 Primare Systems AB. All rights reserved.

Primare Systems AB  
Idavägen 17D  
SE-352 46 Växjö  
Sweden

The information in this guide is believed to be correct as of the date of publication. However, our policy is one of continuous development and so the information is subject to change without notice, and does not represent a commitment on the part of Primare Systems AB.

Primare is a trademark of Primare Systems AB. All other product names are trademarks or registered trademarks of their respective owners.

**Warning:** To prevent fire or shock hazard, do not expose this unit to rain or moisture.

Dangerous voltages inside. Do not open the cabinet. There are no user serviceable parts inside. Repairs should be carried out by qualified service personnel only.

**FCC Warning:** This equipment generates and can radiate radio frequency energy and if not installed and used correctly in accordance with our instructions may cause interference to radio communications or radio and television reception. It has been type-tested and complies with the limits set out in Subpart J, Part 15 of FCC rules for a Class B computing device. These limits are intended to provide reasonable protection against such interference in home installations.

**EEC:** This product has been designed and type-tested to comply with the limits set out in EN55013 and EN55020.

This guide was produced by Human-Computer Interface Ltd,  
<http://www.interface.co.uk>

# ► Contents

---

## Introduction

WELCOME TO THE A30.2 AMPLIFIER .....	①
USING THE A30.2 WITH OTHER PRIMARE PRODUCTS .....	②
TECHNICAL SPECIFICATION .....	②

## Connecting the A30.2 Amplifier

BACK PANEL CONNECTIONS.....	③
POWER CONNECTION.....	④
OUTPUTS .....	④
INPUTS .....	④

## Index



# ► Introduction

**Welcome to the Primare A30.2 Amplifier! This chapter introduces you to its key features, and explains how you can take advantage of its impressive power handling and superb sound in your system.**

## WELCOME TO THE A30.2 AMPLIFIER

The A30.2 is a modular power amplifier designed as the ideal output stage in a home theatre or hi-fi system.

### **Modular design**

The A30.2 is designed as two independent blocks, each with a separate transformer and power supply, for the ultimate in stability and channel separation.

### **Generous power handling**

Each section of the A30.2 delivers 120 Watts into  $8\Omega$ , giving sufficient power reserves for home cinema or the reproduction of recorded music. An over-dimensioned heat sink gives excellent thermal dissipation.

### **Superb quality**

The A30.2 delivers its power at an outstanding quality level, making it as suitable for reproducing high quality recorded music as for home cinema. The A30.2 also provides the option of balanced XLR inputs, for extremely low noise when used in conjunction with a preamplifier that provides balanced outputs.

### **Remote power on/off**

For convenience the A30.2 can be powered on and off via a remote link cable, avoiding the need to switch it on or off separately from the preamplifier in the system.

## USING THE A30.2 WITH OTHER PRIMARE PRODUCTS

Although the A30.2 is flexible enough to act as the output stage in virtually any system, it is ideal for use with other products in the Primare range, such as the Primare P30 Processor. The A30.2 can be used as a building block in conjunction with the Primare A30.3 and A30.5 to create modular systems with any desired number of matched output stages, and one or more A30 Series amplifiers can be powered on or off remotely from a P30 using the remote link connections.


TECHNICAL SPECIFICATION

Output power per channel	120W into 8Ω, 200W into 4Ω
Output impedance	<0.03Ω
Line inputs	1V for 120W into 8Ω
XLR inputs	2V for 120W into 8Ω
Input impedance	11kΩ
Frequency response	<10Hz – 100kHz, -3dB
THD	<0.08%
Signal-to-noise, line	-100dB
Power consumption	800W
Dimensions (WxDxH)	430 x 385 x 100mm
Weight	16kg

# ▶ Connecting the A30.2 Amplifier

**This chapter explains how to connect the A30.2 to the other components in your system, using the connections on the back panel.**

## BACK PANEL CONNECTIONS

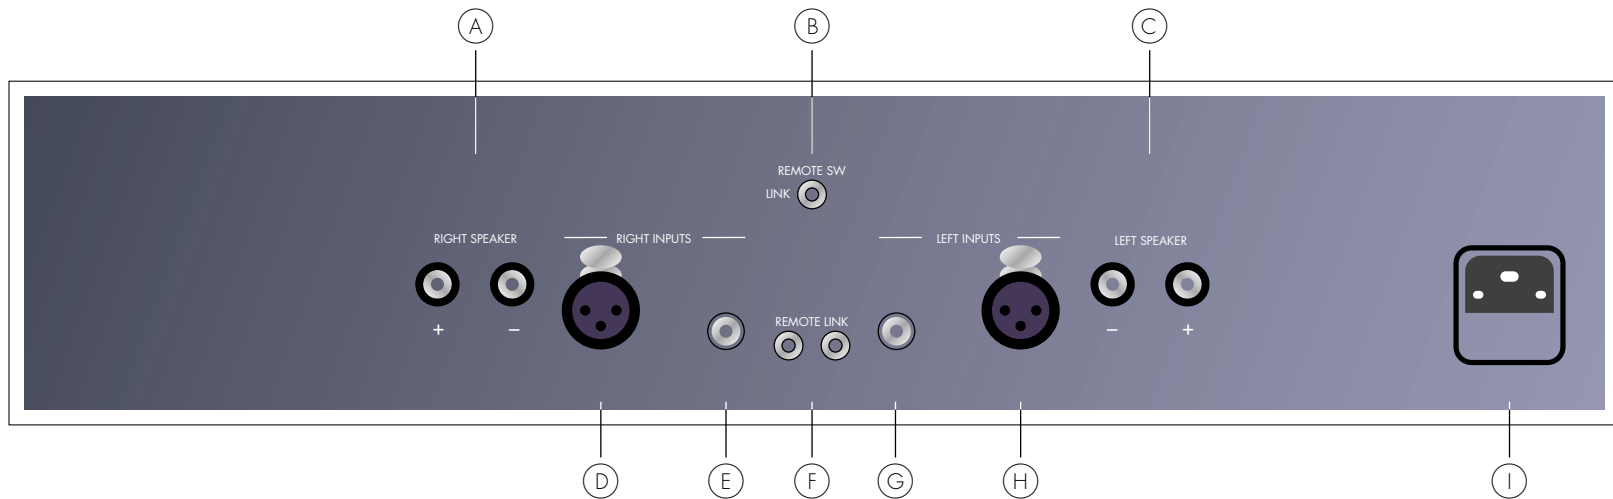

(A) Right loudspeaker outputs.

(B) Remote link switch.

(C) Left loudspeaker outputs.

(D) Right XLR balanced input.

(E) Right phono input.

(F) Remote link sockets.

(G) Left phono input.

(H) Left XLR balanced input.

(I) Mains power input and fuse.

## POWER CONNECTION

**Warning:** Before connecting power check that the required supply voltage, indicated on the back panel, corresponds to your local AC supply. If a different voltage is stated on the type plate do not connect the amplifier to the mains power, and seek advice from your dealer.

Connect the mains power using the enclosed mains cable.

**Note:** Always disconnect the amplifier from the mains power before connecting or disconnecting any of the cables.

## OUTPUTS

### Loudspeaker outputs

Connect the left and right loudspeakers to the corresponding terminals. The terminals can accept speaker cables terminated with 4mm banana plugs, spade terminals, or bare wires. To connect bare wires unscrew the terminal, pass the bare wire through the hole in the terminal bolt, and clamp the wire in place by screwing the terminal back down.

## INPUTS

Connect the A30.2 to the preamplifier or processor using either the left and right phono inputs, or the left and right XLR inputs. If you are using the phono inputs use high quality stereo phono leads. If you are using the XLR inputs use balanced XLR cables.

## REMOTE LINK

To power the A30.2 on and off remotely from a Primare P30 Processor connect the REMOTE output from the P30 Processor to one of the REMOTE LINK sockets on the A30.2, using a twin core cable terminated in 3.5mm jack plugs. The second REMOTE LINK socket can be used to daisy-chain the remote output to further A30 series amplifiers.

To use the remote link switch the REMOTE SW switch to the LINK position.



# ► Index

---

## B

back panel connections .....	3
balanced inputs .....	4

## C

connections .....	3
-------------------	---

## I

inputs .....	4
--------------	---

## O

outputs .....	4
loudspeakers .....	4

## P

P30 Processor, use with .....	4
-------------------------------	---

## R

remote link .....	4
REMOTE switch .....	4

## T

technical specification .....	2
-------------------------------	---

## X

XLR inputs .....	4
------------------	---

